


# VL.606.0.SZ CABIN AIR SPRING

---

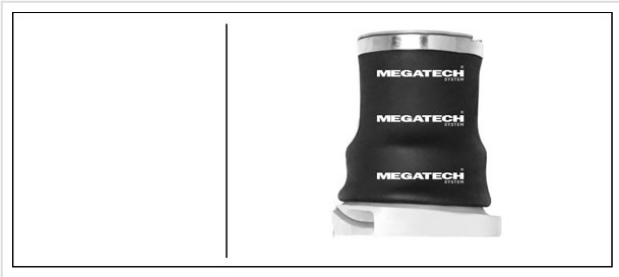

**VL.606.0.SZ**

**CABIN AIR SPRING**

<b>VEHICLE</b>	<b>OE</b>
Renault	5010130797G
Contitech	SZ50-9
MONROE	CB0075
Daf	1331728
Scania	1377520